
Toyota Genuine

Instruction Manual

Warranty Card Attached Separately

Basic One Body

Toyota Part Number: 08600-00590

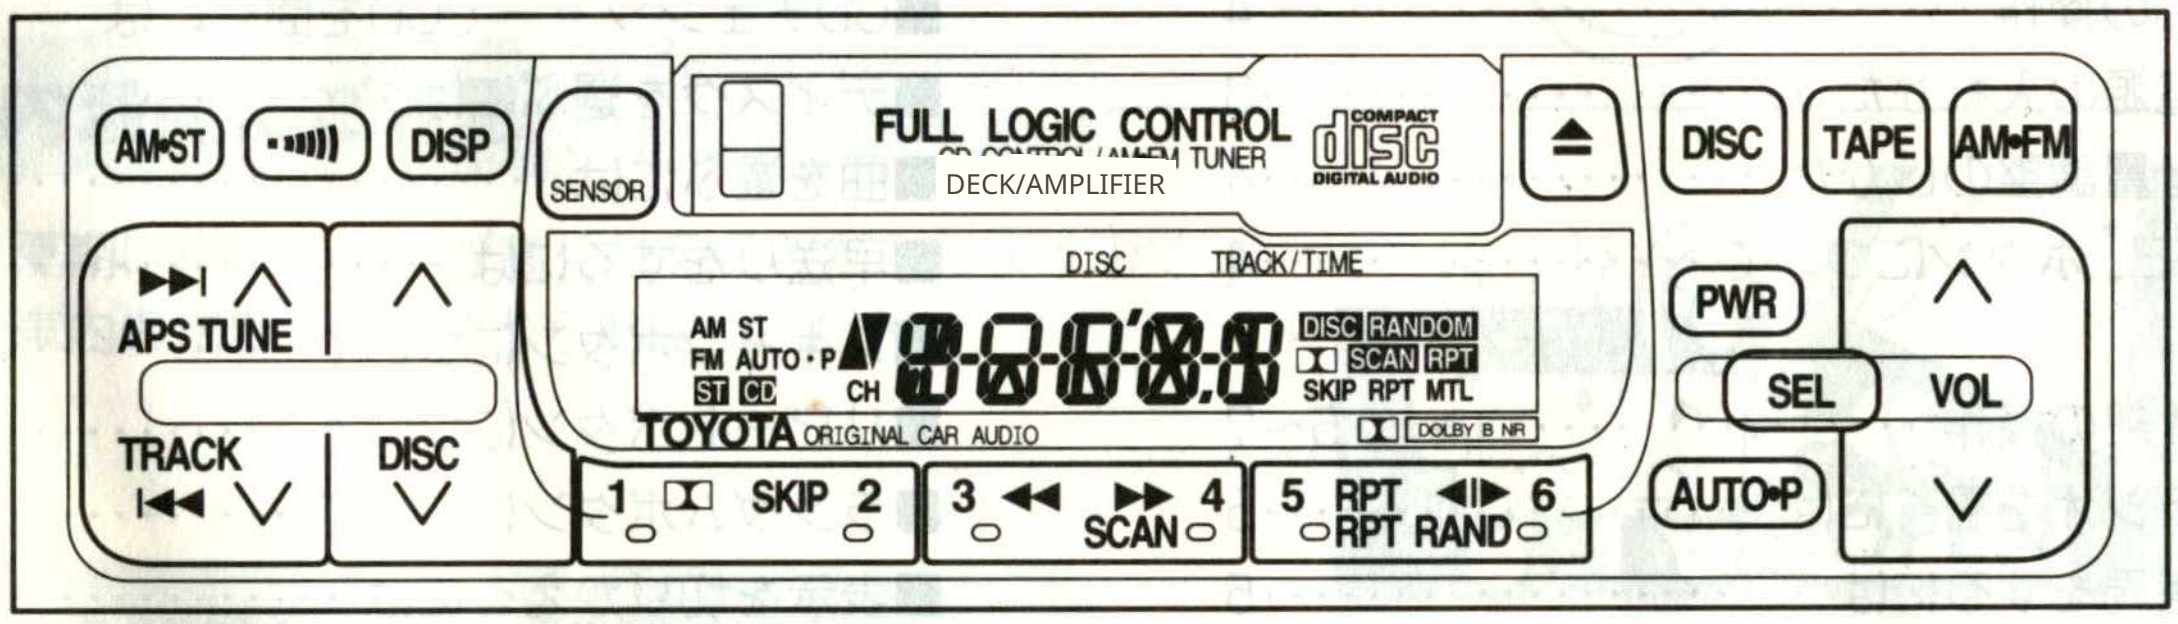

Please read this instruction manual and the attached warranty carefully before use to ensure proper operation.

Afterwards, keep it in a safe place and reread it if you have any questions.

■ Please be sure to keep the warranty card with the "Date of Purchase" Please confirm the entry of the "Dealer Name" and other details, and receive it from the dealer.

Receive it from the dealer.

Toyota Motor Corporation

■ Thank you very much for purchasing the Toyota genuine Basic One Body. This manual indicates important points to observe for safe use with the following marks.

Caution ········	If the precautions are not followed, there is a risk of accidents, injury, or damage to this device.
Advice ···	This section contains information you should know to use the device more safely and comfortably.

Contents

Precautions for Use

Things to keep in mind to ensure long-lasting good condition


Caution

When operating the audio system while driving, please be sure to do so with sufficient caution to avoid interfering with safe driving.

Do not insert anything other than cassette tapes into the cassette tape slot.


Do not insert it under any circumstances.

The head is sensitive to magnetism. Do not bring iron objects such as screwdrivers, pliers, or magnets close to it under any circumstances.




Be careful of the interior temperature of the car

During the summer, the temperature inside the car can become high, so please lower the temperature inside the car before use.



Do not disassemble or adjust this device, Absolutely avoid it.

Since the inside of this unit has a precise structure, if a malfunction occurs, please consult the retailer where you purchased it.



Beware of battery drain


Avoid operating this unit for a long time with the engine stopped. It may cause the battery to drain and prevent the engine from starting.



Common section operation

*This unit can also be operated with a remote control. Please purchase the separately sold multi-remote control at the retailer.
For operation instructions, please refer to the remote control's manual.

*Remote control sensor



Volume and Sound Quality Adjustment Buttons

SEL Button

Power Button

The following button operations cannot be performed with the multi-remote control. Please operate on the main unit.

Advice

- SEL Button
- Traffic Information Button
- AM Stereo Button
- Tape Eject Button
- DISP Button

How to Turn On the Power

1 Turn the engine switch to ACC or ON.

2 Press the power button.



How to Turn Off the Power

1 Press the power button. Or turn the engine switch to OFF.

How to adjust the volume 2 o'clock April



Press the ∧ side to increase the volume.


Press the < side to decrease the volume.

1 When you press the volume and sound quality adjustment button, the volume is displayed.

(The minimum is "VOL-00" and the maximum is "VOL-36")

2 When you release the button, the display returns to the original after about 6 seconds.

About the SEL button

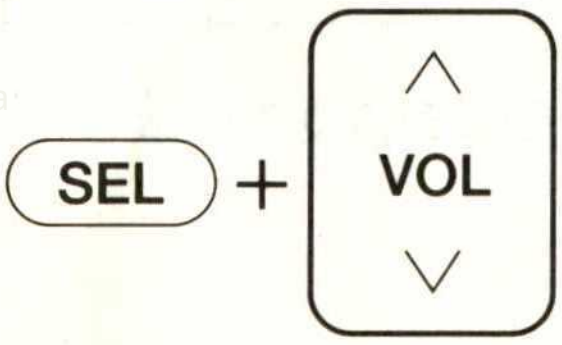


1 Each time the SEL button is pressed, the display switches in the order FAD → BAS → TRE → BAL → VOL.

2 Using the volume and sound quality adjustment buttons, you can adjust front/rear volume, bass, treble, left/right volume, and overall volume respectively.

When you release the 3 buttons, each display will return to the original display after about 6 seconds.

● Front/rear volume

FAD

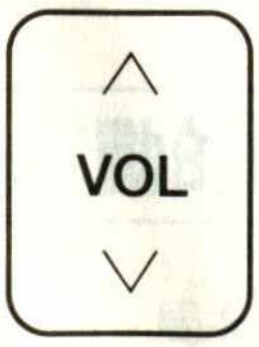


Front side large

Rear Side Large

(FAD-R9 ~FAD-F9)

▶ Left/right volume

BAL

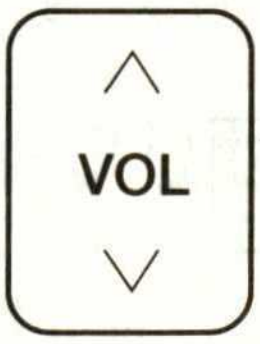


Right Side Large

Left Side Large

(BAL-L9 ~BAL-R9)

▶Bass

BAS

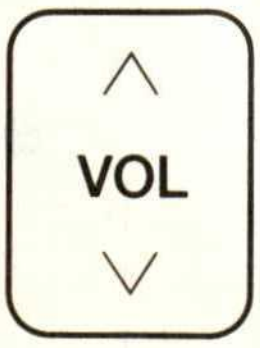


Strong

Weak

(BAS-- 6 ~BAS- 6)

●Treble

TRE

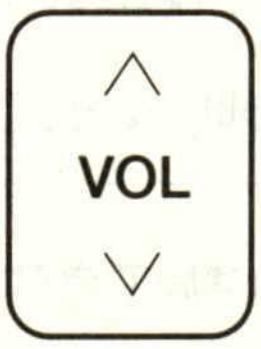


Strong

Weak

(TRE-- 6 ~TRE- 6)

Radio section operation

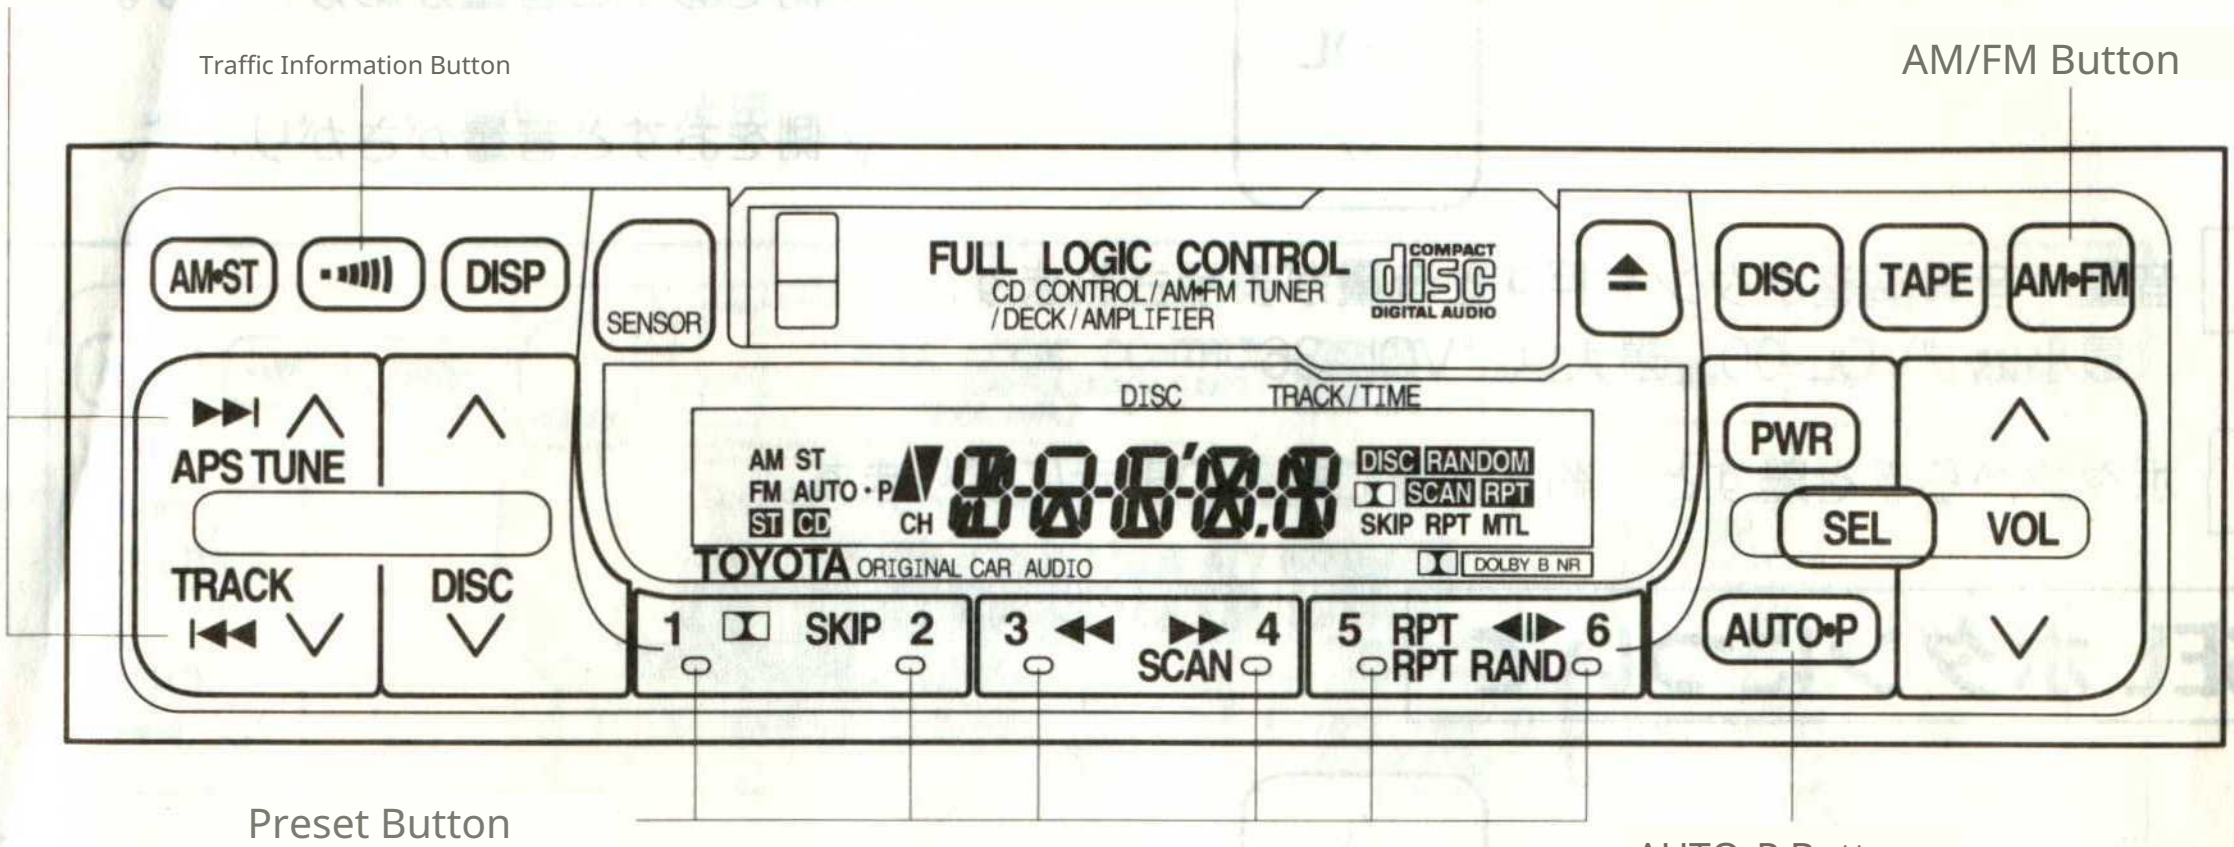

To Listen to the Radio

1 Press the AM/FM button to select either AM or FM broadcast.

2 Press the tuning button or the preset button to select a station.

3 Each time you press the AM/FM button, it switches between AM and FM.

To stop the radio,

1 press the power button. Press it again to resume reception.

To select a station LOV

To manually select a station

1 Press the tuning button ^ on the side or the V side.

2 Receive the selected broadcast station.

To automatically select a station

1 Press and hold the tuning button until a beep sounds.

Press again to stop midway.

Advice If the received radio signal is weak and automatic tuning cannot be performed, please tune manually.

To store a radio station

You can store your desired radio station in preset buttons 1 to 6.

1. Use the tuning button to select the radio station you want to store.

2. Press and hold the preset button until you hear a beep.

C Advice If the connection to the battery is disconnected, the stored memory will be erased.

About the traffic information button

This button can be used exclusively for receiving traffic information broadcasts in areas where traffic information broadcasting is available.

To listen to traffic information

1. Press the traffic information button.

2. Press it again to cancel.

To set

1. Tune to the broadcast station you want to store on AM.

2. Press and hold the traffic information button until a beep sounds.

● It is preset to 1620 kHz.
Advice: When the connection to the battery is cut off, it will be set to 1620 kHz.

To automatically store radio stations (Auto Preset)

Six strong radio stations are stored in the preset buttons in order of frequency.

1 Press the AM/FM button to select the band you want to store.


Press and hold the AUTOP button until a beep sounds.

Advice

● If there are more than six strong radio stations, the stations with higher frequencies may not be sto red. ● If there are fewer than six strong radio stations, pressing a preset button that has not been s tored will display "".

● After the auto preset operation, pressing the AUTOP button will restore the preset memory to the sta te before the auto preset operation.


AM Stereo Button

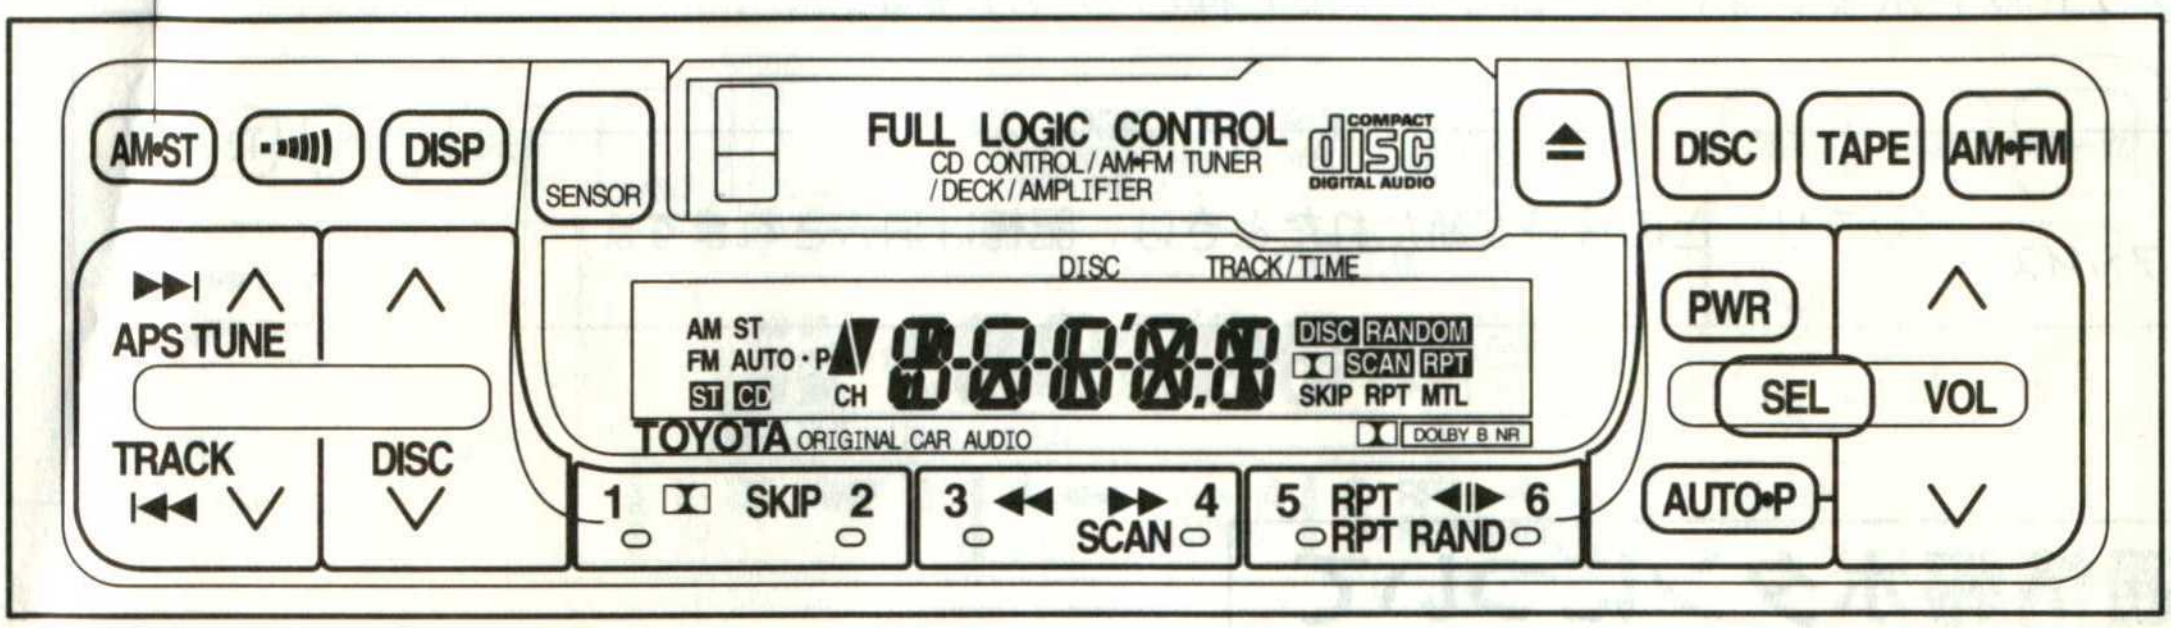


To listen to AM broadcasts in stereo

1. Press the AM stereo button.
   The mode indicator is displayed, and it switches to stereo mode.
   Press again to cancel.

Mode Indicator

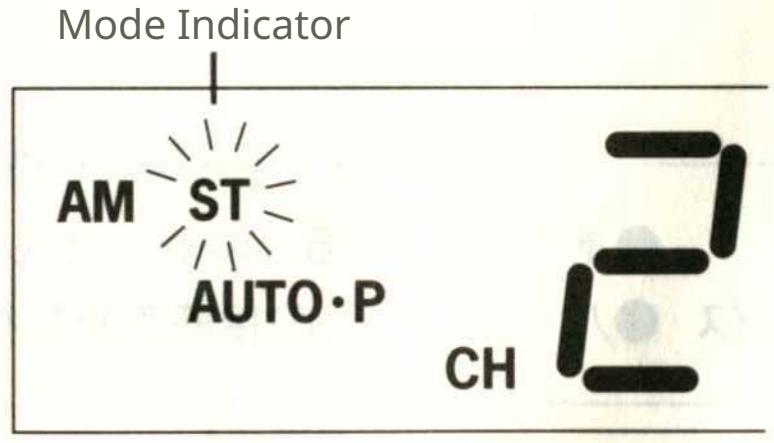

When receiving AM stereo broadcast in stereo mode 2, the stereo indicator is displayed.

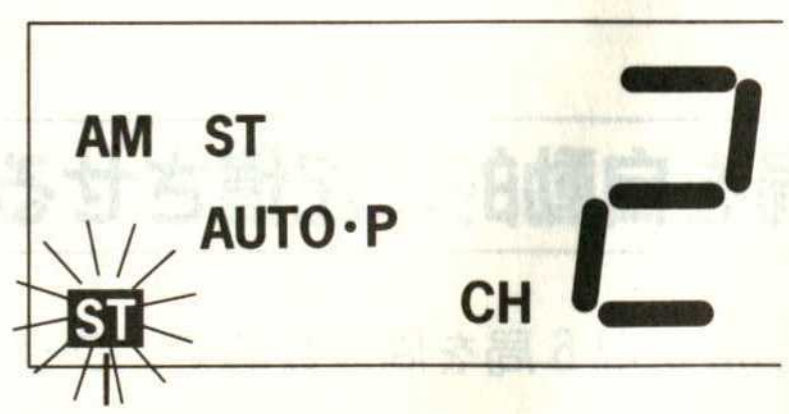


Stereo Indicator

Advice

- If noise is bothersome during stereo reception, switching to mono mode will reduce the noise.
- Even in stereo mode, if the broadcast station you are receiving is not broadcasting in stereo, stereo reception will not be possible.
- Depending on the reception condition, switching to mono mode may not reduce the noise.

Tape Section Operations

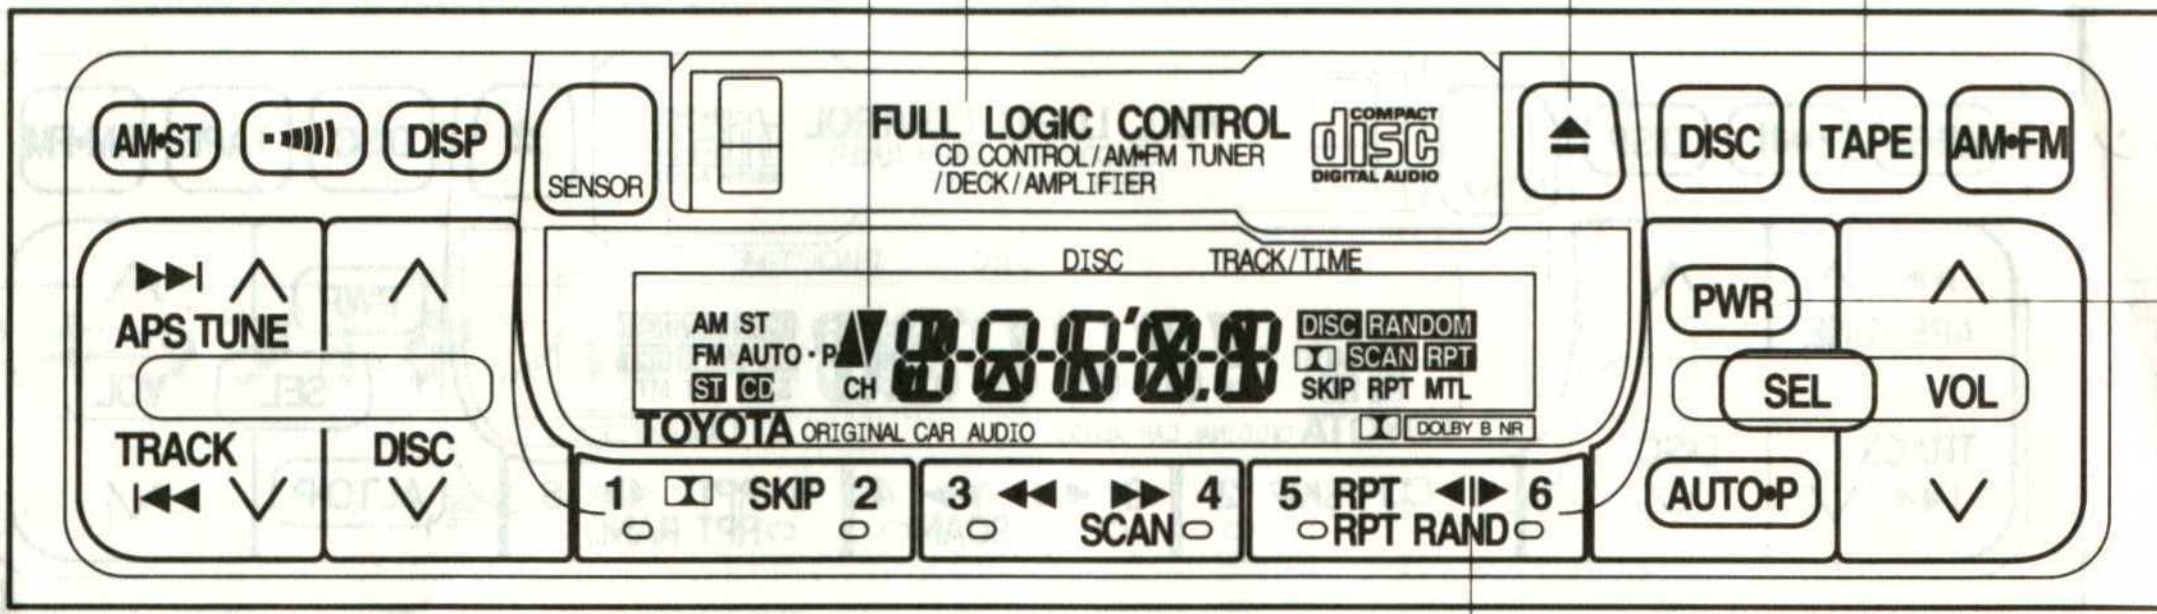

To Listen to Tape

1 Insert the tape into the tape slot.

When the tape is inserted, press the tape button.

To Stop the Tape

1 Press the power button.

Press it again to play.

To Eject the Tape

1. Press the tape eject button.

Advice

Even if the car engine switch is turned off during tape playback, you can eject the cassette tape once.

To change the tape playback direction

1. Press the tape direction change button.

Program indicator


▲ — Playing the upper side.

▼ — Playing the lower side.

Advice

When the tape reaches the end, the playback side will automatically switch without pressing this button.

Tape Section Operations

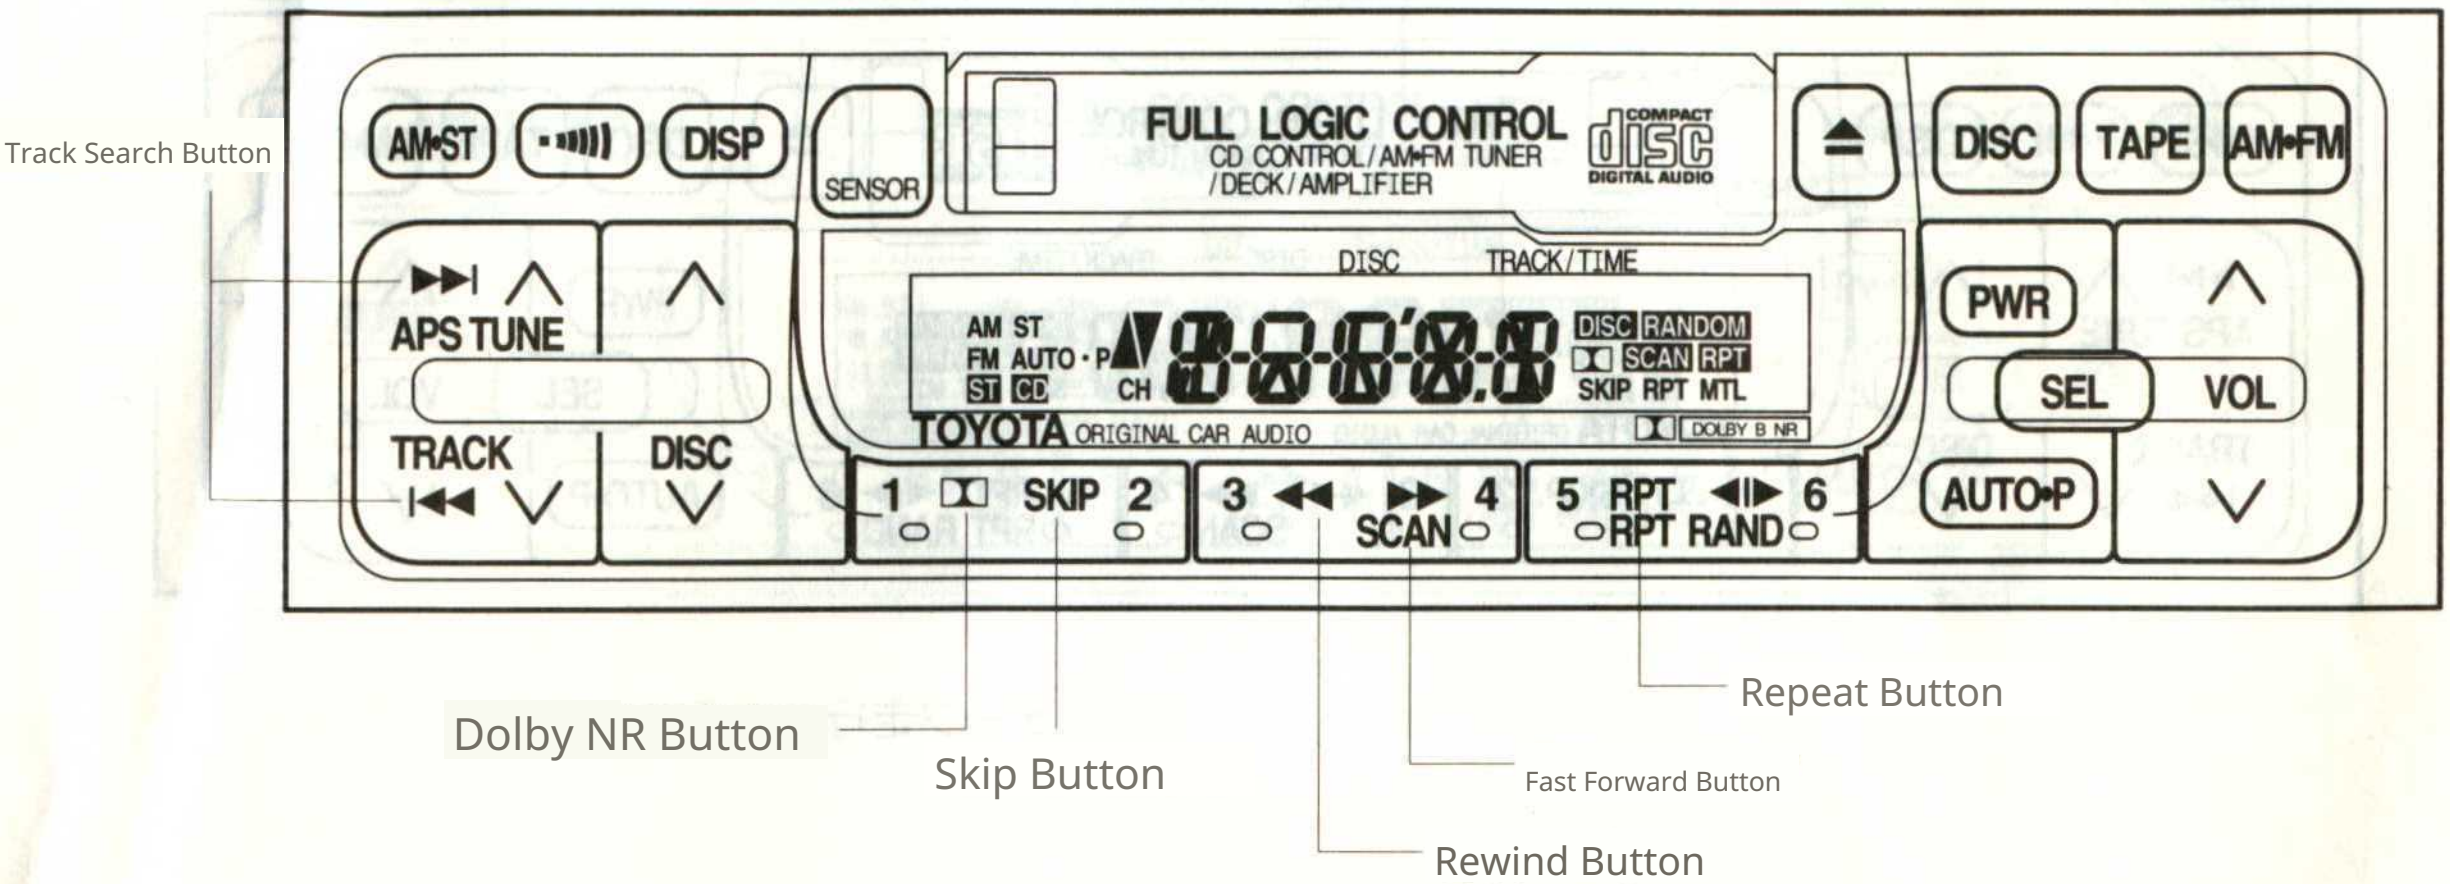

To fast forward or rewind

1 During fast forward, press the fast forward button (▶▶ Press the rewind button (side) when rewinding.

2. Press it again to cancel.

Advice

The tape will automatically stop when it reaches the end.

● In the case of rewinding, playback will start from that side.

● In the case of fast forwarding, playback will start from the next side.

To cue (automatic tuning)

You can cue up to 9 tracks before and after the currently playing track.

Advice

There are cases where it may not operate properly.

● When the interval between songs is less than 3 seconds

● When there is noise between songs

1. Cue button APS-FF (▶▶| Each time you press the side, you can select songs 1 to 9 of the following track.

Each time you press the APS-REW (|◀◀) side of the track search button, you can select from 1 to 9 previous tracks.

Pressing the button during dual track search operation cancels it.

About the repeat button

The same track will be played repeatedly.

1 Press the repeat button. “RPT” will be displayed.

2. Press it again to cancel.

> In the following cases, it may not operate properly.
>
> Advice When the interval between songs is less than 3 seconds
>
> ● When there is noise between songs

About the Skip Button

It plays by skipping silent parts.

1 Press the SKIP button. “SKIP” will be displayed.

2. Press it again to cancel.

> Advice
>
> It may not operate properly in the following cases.
>
> ● When the silent part between songs is 15 seconds or less
>
> ● When there is noise between songs
>
> ● When the end and beginning of songs are not clear

About the Dolby NR Button

1 When using tapes recorded with Dolby* (B) NR, press the Dolby NR button. “DO” will be displayed.

2. Press it again to cancel.


> * Dolby Noise Reduction is manufactured under license from Dolby Laboratories Licensing Corporation. Dolby, DOLBY, and the double-D symbol “DO” are registered trademarks of Dolby Laboratories Licensing Corporation.

About Metal High Position Tapes

When a metal high position tape is inserted, the tape is automatically selected and “MTL” is displayed.

Cleaning and Maintenance Do not use solvents such as benzene or thinner to clean the casing and panel of this device to avoid damage. When using chemical cleaning cloths, be sure to follow the instructions provid

Operation of CD Changer Control Section

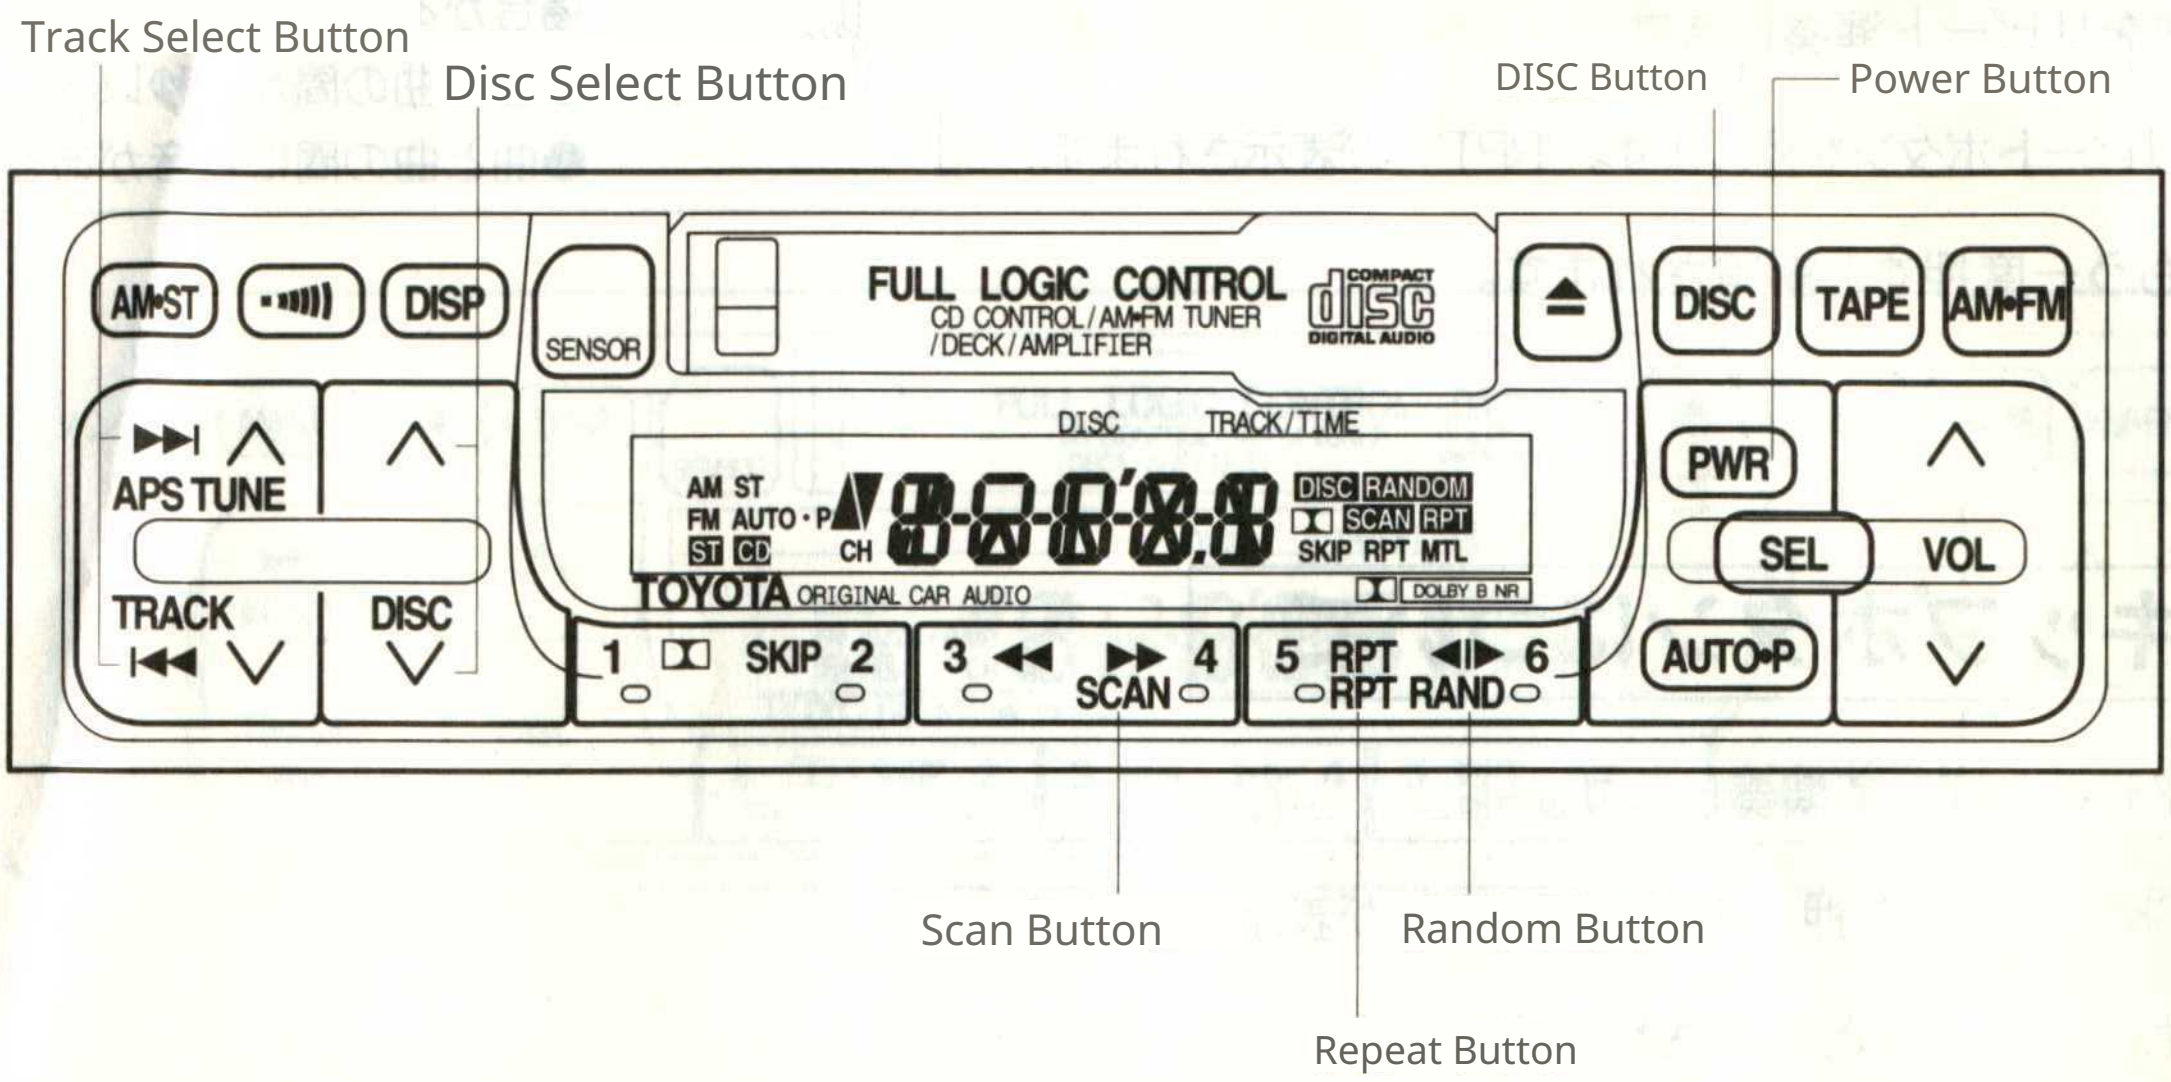

To Listen to CDs on the CD Changer

By connecting a CD changer, you can use it as a CD changer controller.

1 Press the DISC button.

The CD changer magazine is not inserted

It will not operate without advice.

To Stop the CD Changer

1 Press the power button. Press it again to start playback.

To select a disc

1 Press the disc select button. To go to the next disc, press the ∧ side; to go to the previous disc, press the ∨ side.

To select a track

1 Press the track select button. To go to the next track, press the ▶▶| side; to go to the previous track, |◀◀, press the side.

Advice

Press the |◀◀ side once to restart the currently playing track from the beginning.

To fast forward

1 Press and hold the track select button. To advance, press the ▶▶| side; to rewind, press the |◀◀ side and hold.

It starts playing when you release your hand.

2 When you release your hand, playback begins.

About the scan button

When searching for a desired track from the disc currently playing

1 Press the scan button. The beginning of each track on the disc being played will be played for about 10 seconds in succession, Press the SCAN button. is displayed.

2 When the desired track is reached, press the button again to start playing that track.

When searching for a desired disc from all discs in the magazine ATOMIY

1. Press and hold the scan button until you hear a beep. The beginning of the first track of each disc in the magaz ine will be played sequentially for about 10 seconds each. "DISC SCAN" will be displayed.

2 When the desired disc is selected, pressing the button again will start playing that disc.

About the repeat button

To repeat the same track

1 Press the repeat button. “RPT” will be displayed.

2 Press the button again to cancel.

To repeat the same disc

1 Press and hold the repeat button until a beep sounds. “DISC RPT” is displayed.

2 Press the button again to cancel.

About the random button

To play tracks randomly from the disc being played

1 Press the random button. “RANDOM” ” is displayed.

2. Press it again to cancel.


When playing randomly from all discs in the magazine

1 Press and hold the random button until a beep sounds. “DISC RANDOM” ” is displayed.

2. Press it again to cancel.

Operation of CD Changer Control Section

DISP button

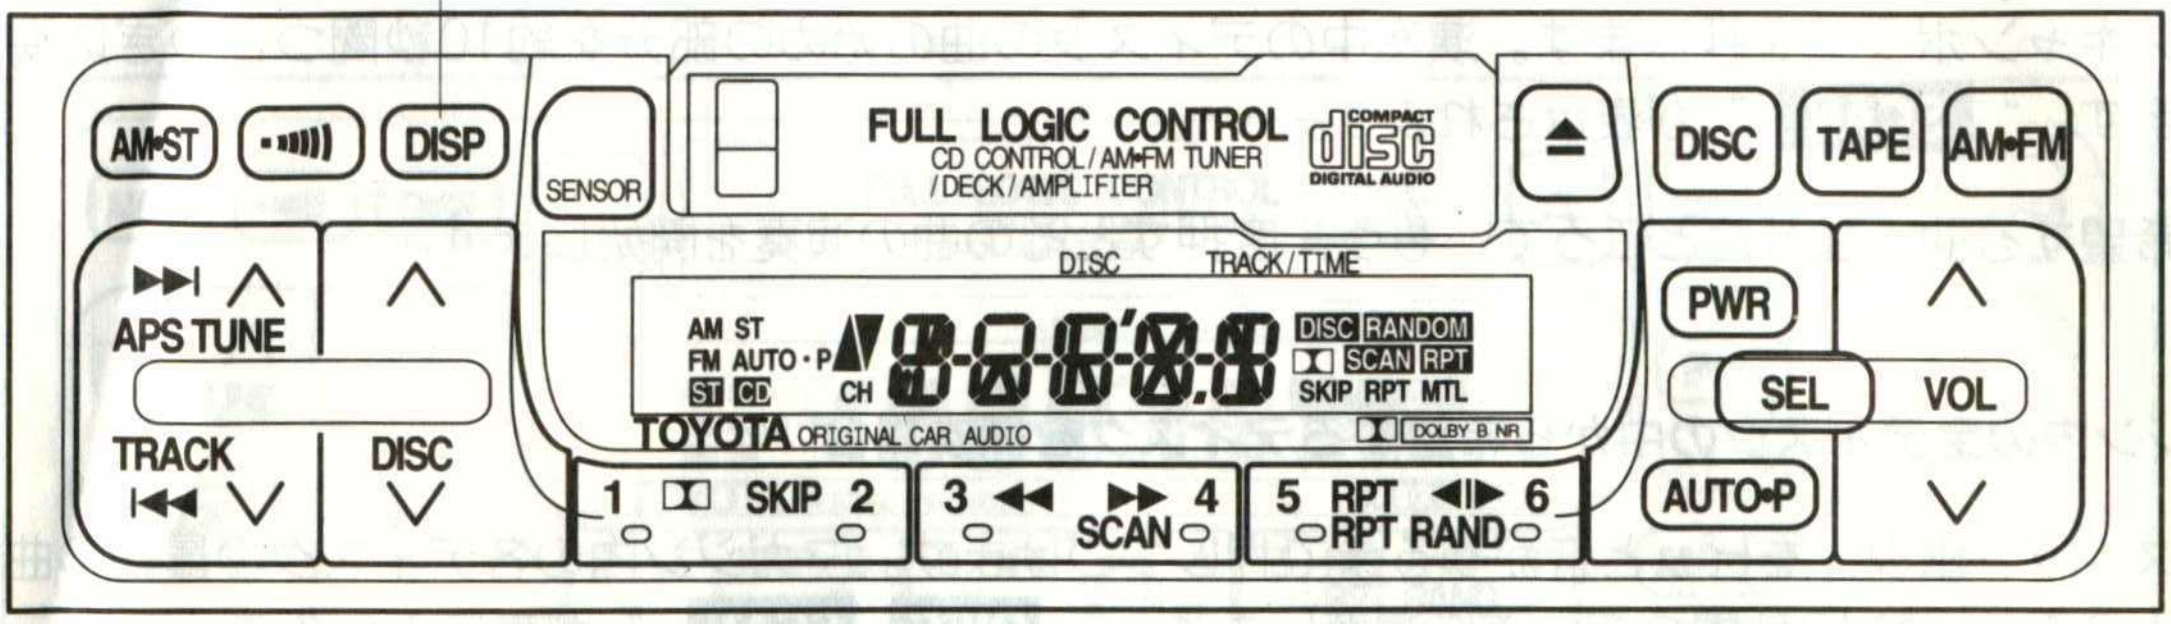

To switch the display

1 Press the DISP button.

2 Each time you press the button, the display alternates between disc/track display and minute-second display.

About messages

Display	内 Content
LOAD	When the magazine is set in the CD changer, this is displayed while the CD changer searches for the presence of discs.
OPEN	Displayed when the CD changer door is open. Please close the CD changer door.
ERR-1	Displayed when the disc is dirty or inserted upside down. Please check the disc.
ERR-2	Displayed when there are no discs in the magazine. Please insert discs into the magazine.
ERR-3	Displayed when the CD changer does not operate due to some cause. Please press the eject switch of the CD changer.
ERR-4	Displayed when excessive current is flowing due to some cause. Please press the eject switch of the CD changer.
WAIT	The temperature of the CD changer has risen, and it will not operate. Please wait as is until the temperature drops.

Handling Cassette Tapes


How to remove tape slack

After tightening as shown in the figure, please use it.

If used while slack remains,

it may cause tape jamming or other issues.

.



Do not touch the tape surface

Please do not pull it out.


Caution

- Do not insert a cassette tape with the tape slac k stopper still in place.
- Do not place near magnetic objects.

  This will degrade the sound quality.
- Please use cassette tapes of 90 minutes or less. L ong tapes exceeding 90 minutes are very thin and may get caught in the cassette deck.
- If the cassette tape label is peeling off, please r eattach it before use. Using it as is may cause eje ct malfunctions. ■ To prevent dust from stick ing to the tape, store it in a case.
- Do not expose cassette tapes to direct sunlight.

  Also, avoid high temperature and high humidity locations.

How to Care for the Unit



Cleaning and Maintenance Do not use solvents such as benzene or thinner to clean the casing a

Cleaning of this unit

■ Wipe with a dry soft cloth (if heavily soiled, m oisten with alcohol).

Caution

Do not use benzine or thinner, as they will dete riorate the case and paint.

■ When using chemical cleaning cloths, please follow th e instructions provided.

Head cleaning

■ When using this unit for a long time, magn etic powder and dirt from the tape may adh ere to the surface of the head, causing noise or deterioration of sound quality. In such ca ses, please use a cleaning tape to clean the head. ■ Cleaning tapes sold at tape retailers a re convenient for this purpose.

Before Considering It a Malfunction

■ If an abnormality occurs (such as a blown fuse), please be sure to request repairs from the dealer where you purc hased the unit. If you replace the fuse or attempt repairs yourself, it may cause further damage, so please be esp ecially careful.

Please check according to the following table and take subsequent measures.

Symptom	Cause	Action
No sound.	The car's power switch is not tu rned on.	● Please set the car key to the "ACC" or "ON" position.
	Volume control button malfunction	● Please press the volume control button to ch eck.
Sound comes out from only one speaker.	Volume control buttons for left and right r malf	● Please press the left and right volume control buttons to check fo unction.
Even after inserting the cassette tape, it imme diately keeps reversing repeatedly.	Defective cassette tape	● Please try listening with another cassette tape.
The sound quality of the cassette tape is poor.	Defective cassette tape	● Please try listening with another cassette tape.
	The head is dirty.	● Please try cleaning the head. (Refer t o the “Head Cleaning” section.)
Cannot perform track search.	The silent part between tracks is short.	● Please check with another cassette tape.
The cassette tape will not eject.	Defective cassette tape	● Please contact the store where you purchased the product.
The sound quality does not change even after adjustment.	The adjusted sound quality is not included in the broadcast, tape, or disc.	● Please try changing the broadcast, ta pe, or disc to check.

If the problem persists after the above measures, please contact the retailer where you purchased the product.

About After-Sales Service

1: Warranty card (attached separately.)

Please be sure to receive the warranty card from the retailer with the "purchase date and retailer name" fill ed in, read the contents carefully, and keep it in a safe place.

■ During the warranty period

According to the warranty terms, the retailer where you purchased the product will carry out repairs. Please bri ng the product along with the warranty card.

■ When the warranty period has expired

Please contact the store where you purchased the product. For products that can be used after repair, we will repair them for a fee upon request.

2. Minimum Retention Period for Repair Performance Parts

Repair performance parts (parts necessary for maintaining functionality) are retained for at least 6 years after production is discontinued.

3. If You Have Questions About After-Sales Service

Please contact the store where you purchased the product.

4. When Requesting Repairs


Be sure to turn off the power before requesting repairs at the store where you purchased the product.

About Installation


For detailed information about installation, please consult the store where you purchased the product.

Installation Example

1. Use the included screws to attach the vehicle bracket.
2. Install this unit in the vehicle.

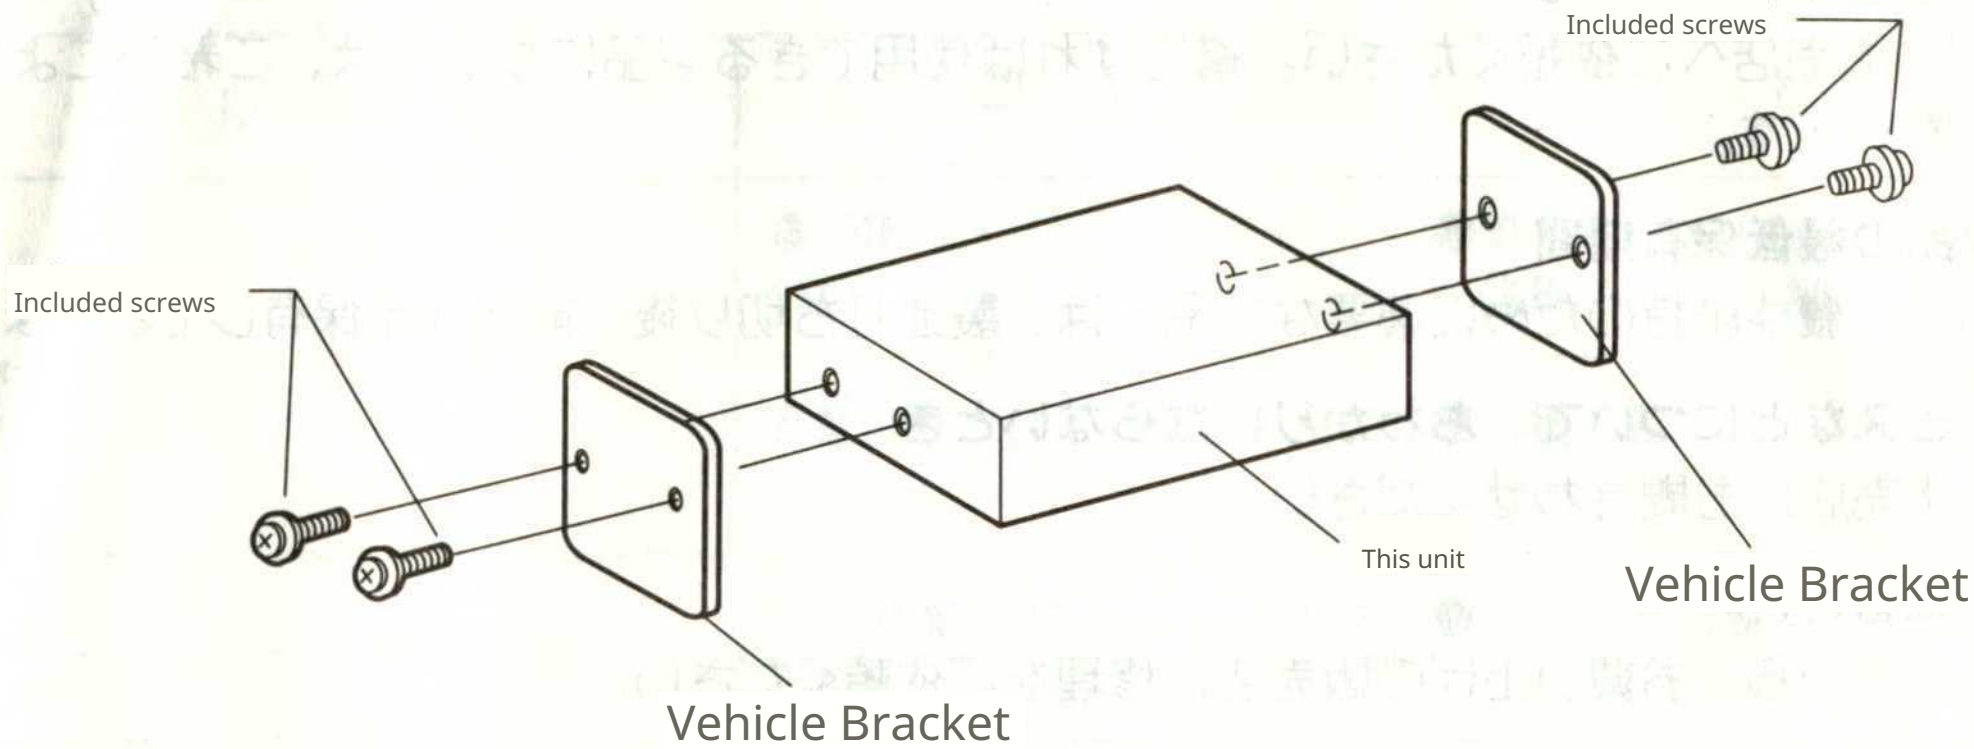

Wiring diagram

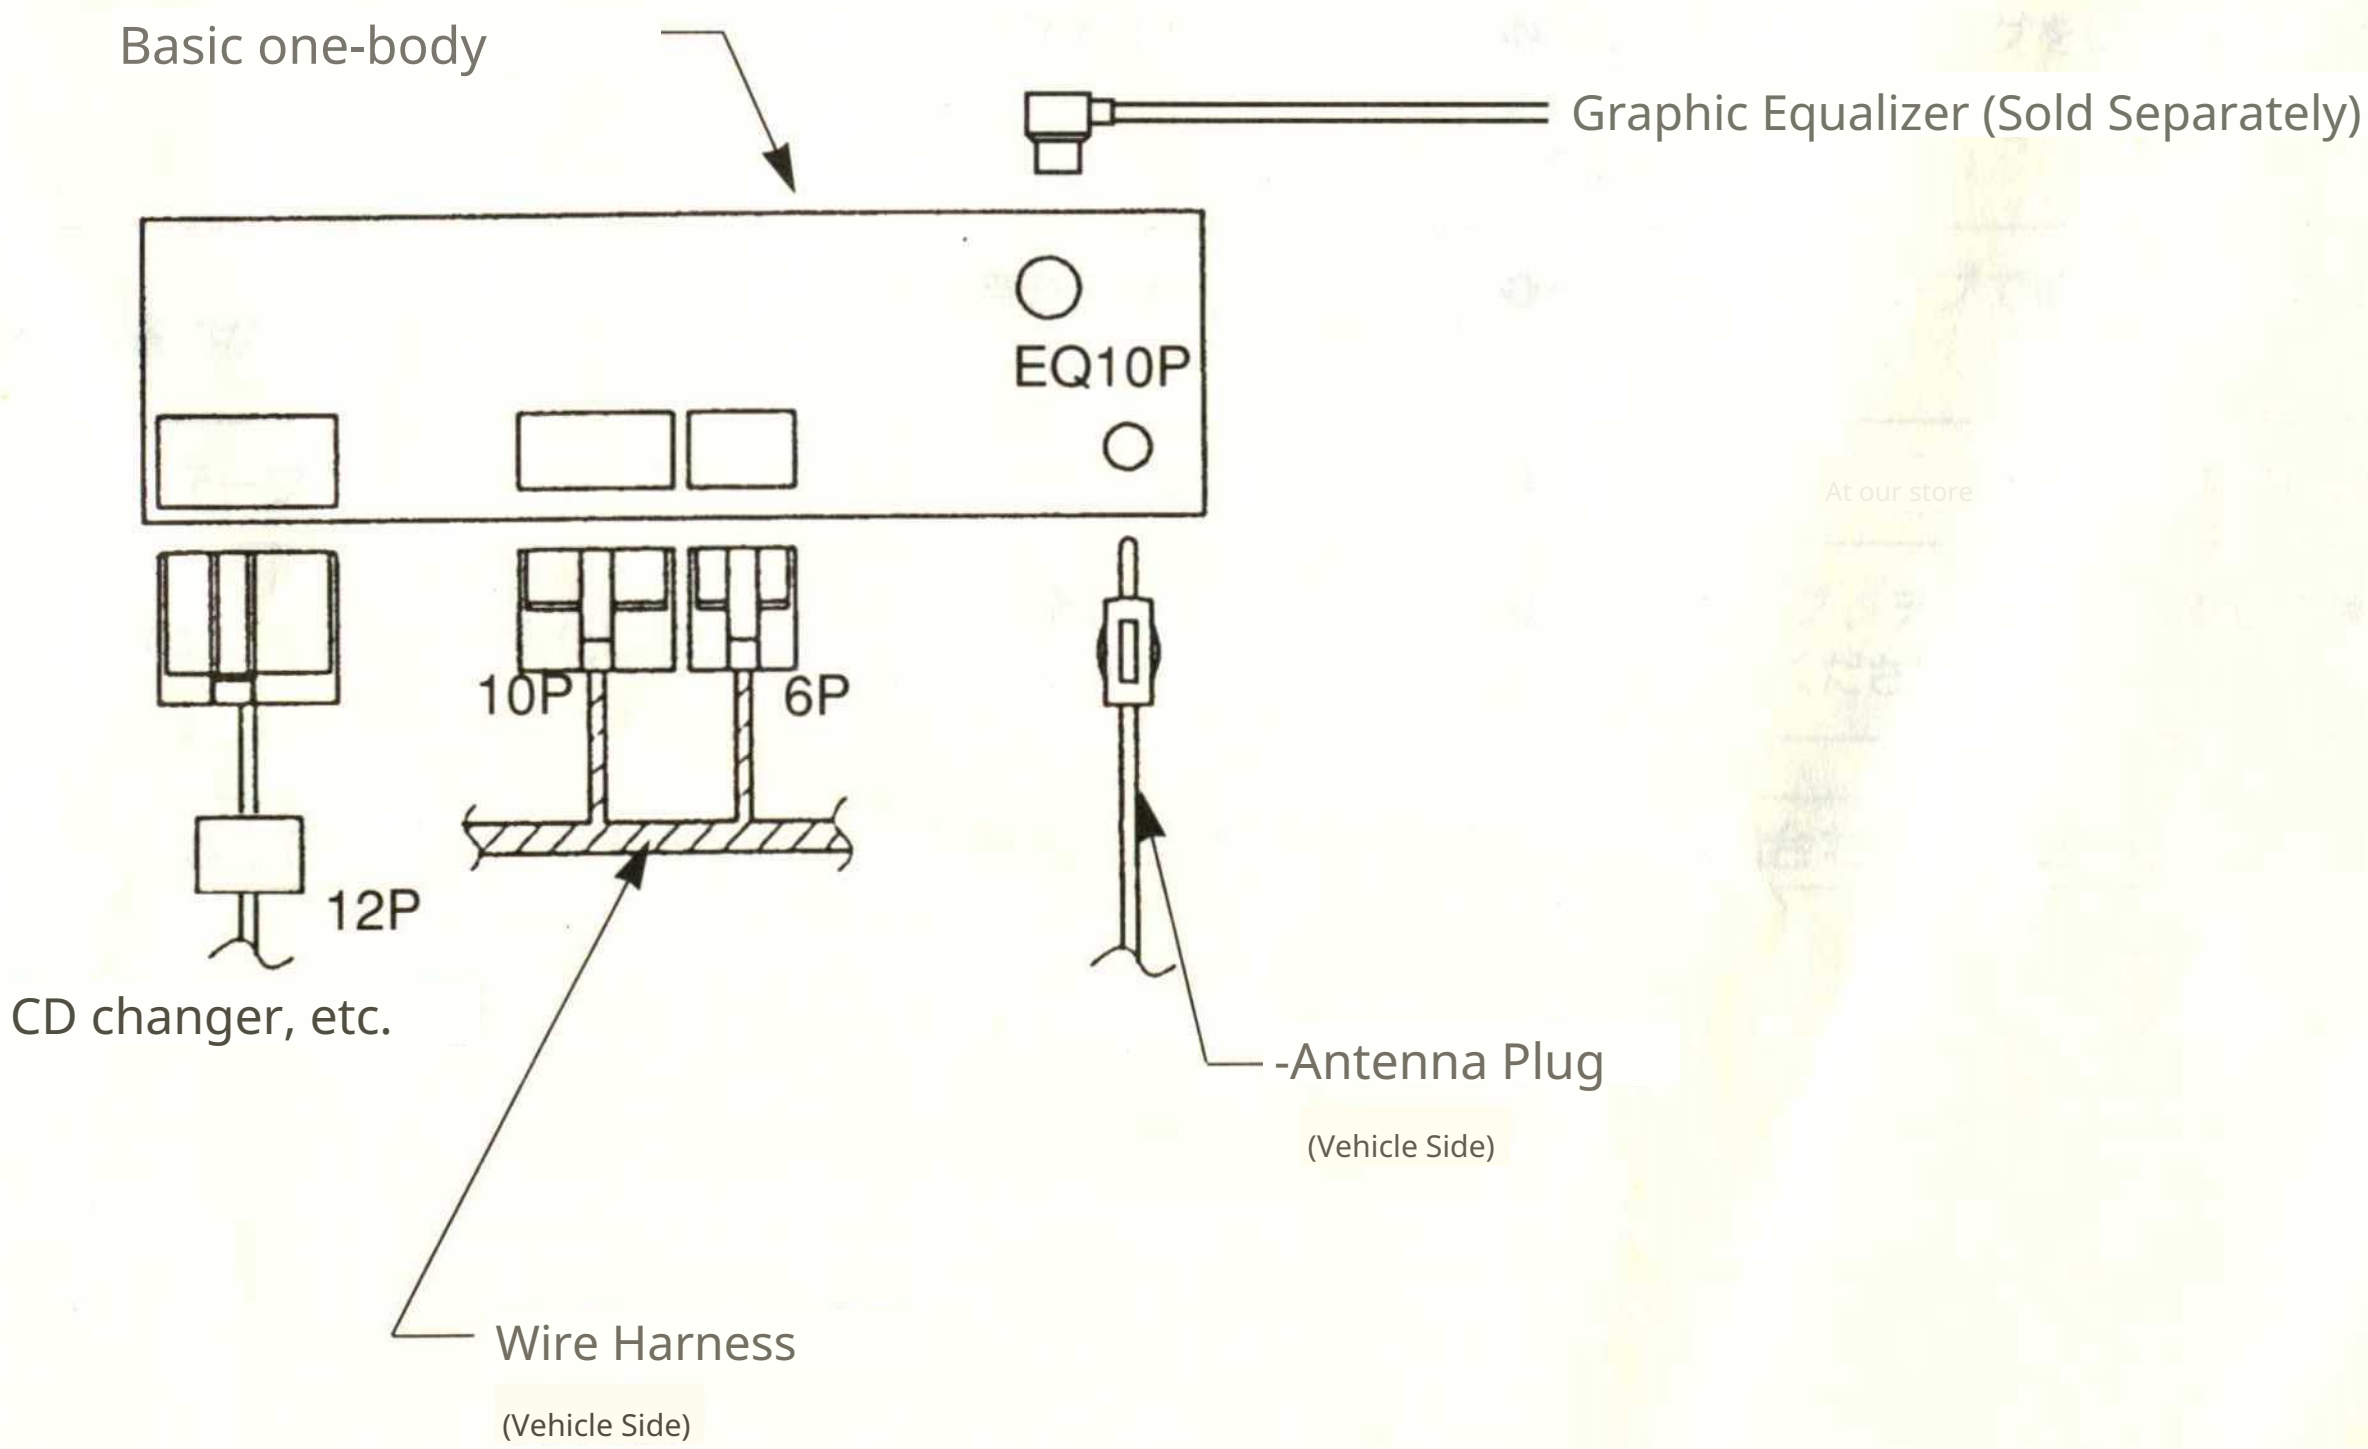

Specifications

電 Power Supply Voltage: DC 12V (Test Voltage 14.4V) アス
消 Current Consumption: 2.0A (When outputting 0.5W×4ch)
Maximum output Power: 25W×4ch
Rated output: 18W×4ch (10% T.H.D)
Suitable input: 4オンヒ

<FMチューナー部>

Reception frequency band: 76.0 MHz~90.0 MHz
Practical sensitivity: 8dB (UV)
Three ッティン Sensitivity: 10dB(uV)
Signal-to-noise ratio: 55dB
Frequency response: 50Hz~15,000Hz
Seven パレーション : 35dB

<AM Chi 2 - Section 11>

Reception frequency band: 522kHz~1629kHz
Practical sensitivity: 25dB(HV)

<Section>

Playback method: 4-trackッ5-channelステレ
Playback speed:さ4.76cm/sec
75751-0.1% (WRMS)
Signal-to-noise ratio: 50dB
DOLBY NR IN: 10dB improvement (above 5kHz)
Frequency response: 30Hz~15,000Hz
Signal-to-noise ratio: 60dB
Wow and flutter: 40dB

Dimensions: Width 178mm x Depth 165mm × Height 50mm

Weight: 1.6kg

Accessories

1. Instruction manual
2. Complete set of mounting parts
3. Warranty card

Weekly total

トヨタ Automobile Corporation

YEFM282357B B0295-2105